

Electro Static Technology™
31 Winterbrook Road
Mechanic Falls, ME 04256
Tel: 1-207-998-5140
Fax: 1-207-998-5143

Sales/Customer Service: sales@est-aegis.com
Technical Support: techsupport@est-aegis.com
www.est-aegis.com

WARRANTY: Units are guaranteed for one year from date of purchase against defective materials and workmanship. Replacement will be made except for defects caused by abnormal use or mishandling. All statements and technical information contained herein, or presented by the manufacturer or his representative are rendered in good faith. User must assume responsibility to determine suitability of the product for intended use. The manufacturer shall not be liable for any injury, loss or damage, direct or consequential arising out of the use, or attempt to use the product.

AEGIS® SGR, AEGIS® Bearing Protection Ring, Conductive MicroFiber™ are trademarks of Electro Static Technology-ITW
Copyright © 2014 all rights reserved

Installation Guide:

1. Shaft must be clean & free of any coatings, paint, or other nonconductive material.
2. AEGIS® SGR should not operate over a keyway. If SGR will operate over a keyway, fill keyway with a fast-curing epoxy putty in the area of contact.
3. Install the Bearing Protection Ring so that the aluminum ring maintains an even clearance around the shaft. Conductive MicroFibers™ must be in contact with conductive metal surface of the shaft.


4. Drill mounting holes:

Mounting Options	Screw	Drill	Depth of hole	Tap
-1 Mounting Clamps	6-32	#36	1/4"	6-32
-1 Bolt Through	8-32	#29	1/4"	8-32
-2 Mounting Clamps	M3	2.5mm	6mm	M3
-2 Bolt Through	M4	3.25mm	6mm	M4

*CAUTION: DO NOT DRILL INTO BEARING

5. The bolts provide the path to ground. Do not use Loctite or any other non-conductive material to secure the screws.
6. After installation, test for conductive path to ground using Ohm meter. One probe on metal frame of SGR and one probe on motor frame. NOTE: Motor must be grounded to common earth ground according to applicable standards. CAUTION: SGR IS NOT A GROUND FAULT PROTECTION DEVICE.
7. In occasions where Bearing Protection Ring is exposed to excessive debris, additional protection of the fibers may be necessary. Call technical support at 207-998-5140 or email techsupport@est-aegis.com

Form 315-2

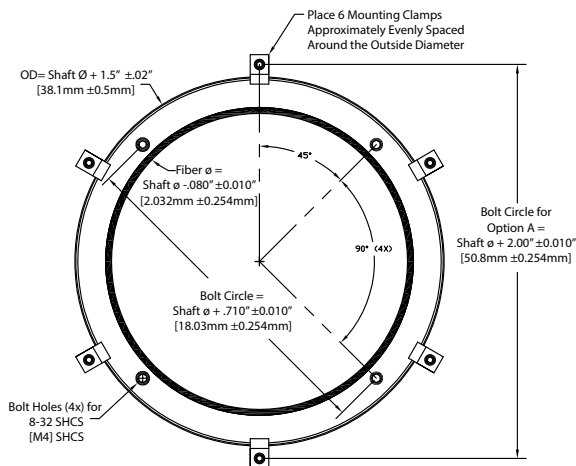

Electro Static Technology™
31 Winterbrook Road
Mechanic Falls, ME 04256
Tel: 1-207-998-5140
Fax: 1-207-998-5143

Sales/Customer Service: sales@est-aegis.com
Technical Support: techsupport@est-aegis.com
www.est-aegis.com

WARRANTY: Units are guaranteed for one year from date of purchase against defective materials and workmanship. Replacement will be made except for defects caused by abnormal use or mishandling. All statements and technical information contained herein, or presented by the manufacturer or his representative are rendered in good faith. User must assume responsibility to determine suitability of the product for intended use. The manufacturer shall not be liable for any injury, loss or damage, direct or consequential arising out of the use, or attempt to use the product.

AEGIS® SGR, AEGIS® Bearing Protection Ring, Conductive MicroFiber™ are trademarks of Electro Static Technology-ITW
Copyright © 2014 all rights reserved

Installation Guide:

1. Shaft must be clean & free of any coatings, paint, or other nonconductive material.
2. AEGIS® SGR should not operate over a keyway. If SGR will operate over a keyway, fill keyway with a fast-curing epoxy putty in the area of contact.
3. Install the Bearing Protection Ring so that the aluminum ring maintains an even clearance around the shaft. Conductive MicroFibers™ must be in contact with conductive metal surface of the shaft.

4. Drill mounting holes:

Mounting Options	Screw	Drill	Depth of hole	Tap
-1 Mounting Clamps	6-32	#36	1/4"	6-32
-1 Bolt Through	8-32	#29	1/4"	8-32
-2 Mounting Clamps	M3	2.5mm	6mm	M3
-2 Bolt Through	M4	3.25mm	6mm	M4

*CAUTION: DO NOT DRILL INTO BEARING

5. The bolts provide the path to ground. Do not use Loctite or any other non-conductive material to secure the screws.
6. After installation, test for conductive path to ground using Ohm meter. One probe on metal frame of SGR and one probe on motor frame. NOTE: Motor must be grounded to common earth ground according to applicable standards. CAUTION: SGR IS NOT A GROUND FAULT PROTECTION DEVICE.
7. In occasions where Bearing Protection Ring is exposed to excessive debris, additional protection of the fibers may be necessary. Call technical support at 207-998-5140 or email techsupport@est-aegis.com

Form 315-2